

RC Grinder

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack RC Grinder is built to handle the road in style, whether in your house's hallway or on the sidewalk outside.

THE FCC WANTS YOU TO KNOW

Your Grinder or controller might cause TV or radio interference even when they are operating properly. To determine whether your Grinder or controller is causing the interference, turn off the Grinder and its controller. If the interference goes away, your Grinder is causing it. Try to eliminate the interference by:

- moving your Grinder away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Grinder.

INSTALLING BATTERIES

For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard alkaline, or recharge-

able), or rechargeable batteries of different capacities.

- Never leave dead or weak batteries in the Grinder or the controller.
- Dispose of batteries promptly and properly. Do not bury or burn them.

If you do not plan to use the Grinder for a week or more, remove the batteries from both the controller and the Grinder. Batteries can leak chemicals that can destroy electronic parts.

In the Controller

The controller requires one 9-volt battery.

1. Use a Phillips screwdriver to remove the screw from the battery compartment cover and slide the cover off.
2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw.

When the controller's range decreases, replace its battery.

In The Grinder

The Grinder requires two AA batteries.

1. Slide **ON/OFF** on the bottom of the Grinder to **OFF**.








RadioShack®

www.radioshack.com™

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

2. Use a Phillips screwdriver to loosen the battery compartment cover screw, then slide the cover in the direction of the arrow and lift it up.
3. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
4. Replace the cover and secure it with the screw.

DRIVING THE GRINDER

1. Slide **ON/OFF** on the bottom of the Grinder to **ON**.
2. Hold down  on the controller to move the Grinder forward.
3. Hold down  on the controller to move the Grinder backwards in a clockwise circle.
4. To make the Grinder pop a wheelie, hold down , then quickly press  to move the Grinder forward in the wheelie.
5. Press  to end the wheelie.
6. Release all buttons to stop the Grinder.
7. When you finish driving the Grinder, slide **ON/OFF** to **OFF**.

Helpful Hints

If the Grinder's motor runs but it does not respond to the controller, move closer to the Grinder and try again.

If someone uses another remote controlled device or a CB nearby, it might interfere with control of the Grinder. If this happens, check to see if the controller uses the same frequency (27 MHz) and move the Grinder away from the device or the CB.

If the Grinder moves slowly, and you have installed fresh batteries, check the wheel mechanisms and remove any lint, thread, hair, or dust you find.

CARE

Keep the Grinder dry; if it gets wet, wipe it dry immediately. Use and store the Grinder only in normal temperature environments. Handle the Grinder carefully; do not drop it. Keep the Grinder away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Grinder's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your Grinder is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-2780
04A01
Printed in Hong Kong